

Dear Customer

◆ About the Upgrade of the DMC-GH4 Firmware

The following functions were added or changed from Ver. 2.1 of the firmware. Please read this in conjunction with the operating instructions for the camera.

• The firmware version can be checked from the [Version Disp.] of the [Setup] menu.

[HDMI Time Code Output] has been added to [Time Code] in the [Motion Picture] menu.

[HDMI Time Code Output] can now be selected from [Time Code] in the [Motion Picture] menu. This enables a time code to be output to video from the HDMI output.

 $\mathbf{MENU} \rightarrow \mathbf{mer}[\mathbf{Motion\ Picture}] \rightarrow [\mathbf{Time\ Code}]$

	Set whether or not to output a time code to video from the HDMI output. [ON]/[OFF]
[HDMI Time Code Output]	[HDMI Time Code Output] can only be set in Creative Video Mode. When using the HDMI output and outputting videos that do not include time codes (e.g., when [Rec Format] is set to [MP4]), a time code will not be output. When set to [ON], the device screen may go dark depending on the connected device. If this happens, set to [OFF].

■ Conditions for outputting a time code to HDMI output

A time code is output to video from the HDMI output only when all the following conditions are satisfied.

In recording

- When [HDMI Time Code Output] is set to [ON].
- · In Creative Video Mode.
- When [Rec Format] is set to [AVCHD], [MP4 (LPCM)] or [MOV].

In playback

- When [HDMI Time Code Output] is set to [ON].
- When playing back a motion picture recorded with Creative Video Mode.
- When [HDMI Mode (Play)] in [TV Connection] is set to [AUTO].

[HDMI Recording Control] has been added to [HDMI Rec Output] in the [Motion Picture] menu.

[HDMI Recording Control] can now be selected from [HDMI Rec Output] in the [Motion Picture]

MENU → ■ [Motion Picture] → [HDMI Rec Output]

[HDMI Recording Control]

Set whether or not to output control informations for recording start/stop to external devices connected to the HDMI socket.

[ON]/[OFF]

- [HDMI Recording Control] can only be set when [HDMI Time Code Output] is set to [ON] in Creative Video Mode.
- · Control informations are output when starting/stopping recording motion pictures. Control information is output when pressing the motion picture button or shutter button, even if the motion picture cannot be recorded (such as when there is no card inserted into this unit).
- Control information can be output only when outputting a time code to video from the HDMI output durina recordina.
- · Only compatible external devices can be controlled.

[1080/30p Set.] ([1080/25p Set.]) has been added to [HDMI Rec Output] in the [Motion Picture] menu.

[1080/30p Set.] ([1080/25p Set.]) can now be selected from [HDMI Rec Output] in the [Motion Picture] menu.

MENU → **III** [Motion Picture] → [HDMI Rec Output]

	Set the HDMI output format for motion pictures with a size/recording frame rate of FHD/30p (FHD/25p).
[1080/30p Set.]/ [1080/25p Set.]	[60p]([50p]): HDMI output at FHD/60p (FHD/50p). [30p]([25p]): HDMI output at FHD/30p (FHD/25p).

- Menu items and the output frame rate change to suit [System Frequency] settings.
- When [System Frequency] is set to [24.00 Hz (CINEMA)], this function is not available.

[For owners of the interface unit for professional use (AG-YAGH)] Information on updating the firmware of your interface unit for professional use.

Use the interface unit for professional use (AG-YAGH) that is compatible with this unit after updating the firmware.

· When using the interface unit without updating, some functions may not operate normally.

Compatible firmware versions

Digital camera	Interface unit
2.1 or higher	1.1 or higher

 To check the firmware version of the interface unit, attach it to the camera body and select [Version Disp.] in the [Setup] menu.

For information on the update procedure of the interface unit for professional use, refer to the support site below:

http://pro-av.panasonic.net

• This site is for business products.