

Dear Customer

◆ About the Upgrade of the DMC-GX7 Firmware

The following functions were added or changed from Ver. 1.2 of the firmware.
Please read this in conjunction with the owner's manual for the camera.


- The firmware version can be checked from the [Version Disp.] of the [Setup] menu.

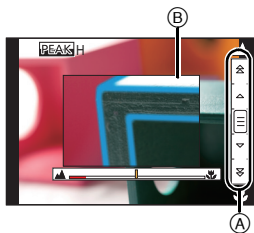 
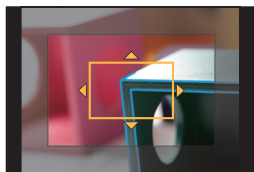 
[Flash Adjust.] can now be assigned to the function buttons.

[Flash Adjust.] can now be selected from [Setting in REC mode] of [Fn Button Set] in the [Custom] menu.

 

Manual focus operation is now available for the interchangeable lens with no focus ring (H-FS12032).

When using the interchangeable lens with no focus ring (H-FS12032)

- 1 Set the focus mode lever to [MF].
- 2 Press ◀ ().
- 3 Press ▲/▼/◀/▶ to move the MF area, and press [MENU/SET].
 - The MF area can also be moved by dragging the screen.
 - Pressing [DISP.] will return the MF area back to the center.
- 4 Press ◀/▶ to focus.
 - Ⓐ Slide bar
 - Ⓑ MF Assist (enlarged screen)
 - Pressing and holding ◀/▶ will increase the focus speed.
 - Focus can also be adjusted by dragging the slide bar.
 - The MF area setting screen can be displayed by pressing ▼.



- When the interchangeable lens with no focus ring (H-FS12032) is used, the [MF Assist] settings in the [Custom] menu change as follows:

[ON]	Focus can be adjusted when ◀ () is pressed and the MF area setting screen is displayed.
[OFF]	Focus can be adjusted when ◀ () is pressed. The MF area setting screen will not be displayed.