

Operating Instructions <Setup>

Wireless Speaker System Model No. SC-ALL2

Thank you for purchasing this product. Please read these instructions carefully before using this product, and save this manual for future use. This manual contains quick set up information. More detailed instructions are contained in "Operating Instructions <Full version>" which can be downloaded at the bottom right links.



1 Connect

Do not connect the LAN cable.

2 Turn On Unit


The network indicator starts blinking in blue and red.

After approximately 1 minute, it will blink in blue slowly.


If the blinking in blue does not start, perform a network reset (see below - Network Reset).

3 Configure with Smartphone/Tablet

Go to wireless settings on your smartphone or tablet.

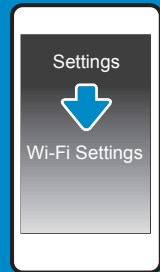


Select "ALL2 [] [] [] [] [] []_AJ"*.
*This can sometimes take 1 minute to appear.

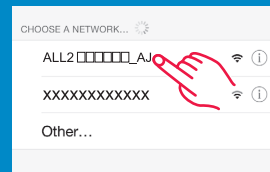


NOTE: If this operation does not work correctly, please repeat it several times.

Name your device e.g. Kitchen, Lounge or whatever you would like it to appear.

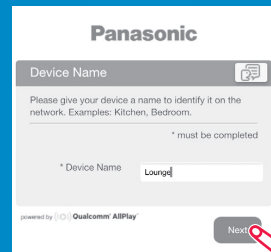


NOTE: If this page is not automatically displayed, type "http://172.19.42.1/" into your internet browser URL address field.

Select your network. (enter password if needed)

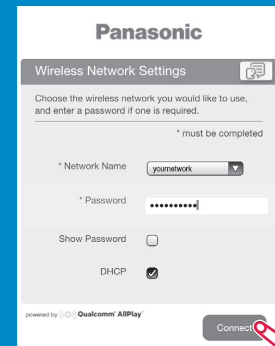



NOTE: If you encounter an error message asking you to reconfigure your router to WPA2™ security, please refer to your router's manual or contact your service provider for instructions on how to do this.

Wait a few seconds and...

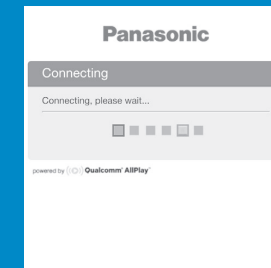

...you're connected!*

*After a short wait, your smartphone/tablet should be automatically reconnected to your Wi-Fi® network. In case you are not reconnected automatically, please re-select your Wi-Fi network from the settings / Wi-Fi settings menu on your device.

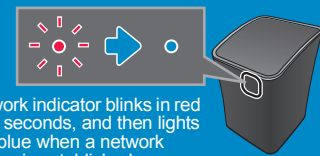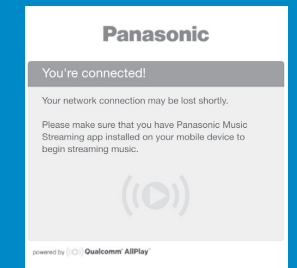

4 Download App

Download the free "Panasonic Music Streaming" app

iOS : App Store

Android : Google Play™

5 Stream your music

For details on the app, refer to the site below. (These sites are in English only.)

iOS | http://panasonic.jp/support/global/cs/audio/app/music_streaming/ios/

Android | http://panasonic.jp/support/global/cs/audio/app/music_streaming/android/

Network Reset

- 1 Touch and hold [NET] and [1] for more than 4 seconds, "... .." on the display will start blinking.
- 2 Touch [NET] within 10 seconds, the network indicator starts blinking blue/red.

Further Support

For Operating Instructions <Full version>, FAQs, video tutorials, or further help, please visit <http://panasonic.jp/support/global/cs/audio/ALL/index.html> (This site is in English only.)

Alternatively, scan the QR code.

Accessories

- 1 AC mains lead

For the United Kingdom and Ireland



For Continental Europe



Bluetooth® operations

Preparation

- Turn on the Bluetooth® feature of the device and place the device near this unit.

1. Touch [⊗].
2. Select "SC-ALL2" from the Bluetooth® device's Bluetooth® menu.
3. Start playback on the Bluetooth® device.

To restore the settings to the factory defaults

You need to perform a factory reset if you want to clear and reset the memory contents.

- If you want to restore the network settings, perform a network reset (see on the reverse - Network Reset).

1. Touch and hold [⏻/⏮] for more than 4 seconds.

Top view

 


Display




2. While still holding [⏻/⏮], touch and release [NET].

Top view



3. During the reset process, "--:--" will be displayed.

 Top view



Display



4. The unit will turn off. "--:--" appears and the reset is complete.

For further dedicated help, support and advice about your ALL Series product please visit: <http://panasonic.jp/support/global/cs/audio/ALL/index.html> (This site is in English only.)

Precautions

WARNING

Unit

- To reduce the risk of fire, electric shock or product damage.
 - Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.
 - Use only the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself. Refer servicing to qualified service personnel.
 - Do not let metal objects fall inside this unit.
 - Do not place any item on top of this unit.

AC mains lead

- To reduce the risk of fire, electric shock or product damage.
 - Ensure that the power supply voltage corresponds to the voltage printed on this unit.
 - Insert the mains plug fully into the socket outlet.
 - Do not pull, bend, or place heavy items on the lead.
 - Do not handle the plug with wet hands.
 - Hold onto the mains plug body when disconnecting the plug.
 - Do not use a damaged mains plug or socket outlet.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

CAUTION

Unit

- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate climates.

Placement

- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage.
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
 - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.

AC mains lead

- Do not use AC mains lead with other equipment.

Caution for AC Mains Lead

(For the AC mains plug of three pins)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark or the BSI mark on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

Before use


Remove the connector cover.

How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

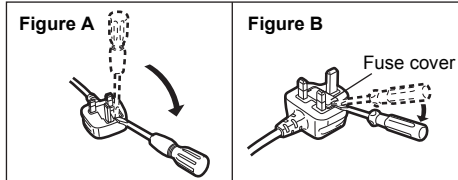

2. Replace the fuse and close or attach the fuse cover.

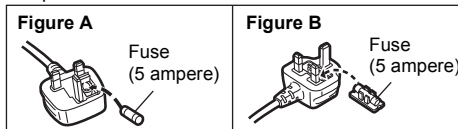

Safety information for customers in Norway

NORSK

ADVARSEL

Produkt

- For å redusere faren for brann, elektrisk støt eller skade på apparatet.
 - Utsett ikke produktet for regn, fukt, drypping eller sprut.
 - Ikke plasser objekter som er fylt med væske, som vaser, på apparatet.
 - Bruk kun anbefalt tilbehør.
 - Fjern ikke deksler.
 - Reparer ikke denne enheten selv, overlat service til kvalifisert servicepersonell.

Vekselstrømnett

- Nettstøpselet er trukket ut fra denne enheten. Installer denne enheten slik at nettstøpselet umiddelbart kan trekkes fra stikkontaktten.


FORSIKTIG

Produkt

- Plasser ikke åpen ild, slik som levende lys, oppå apparatet.
- Dette apparatet er beregnet for bruk under moderate klimaforhold.

Plassering

- For å redusere faren for brann, elektrisk støt eller skade på apparatet.
 - Ikke plasser apparatet i en bokhylle, et innbygget kabinett eller et annet lukket sted. Pass på at produktet er godt ventilert.
 - Apparatets ventilasjonsåpninger må ikke dekkes til med aviser, duker, gardiner eller lignende.

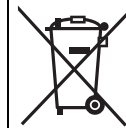

This symbol indicates separate collection of waste electrical and electronic equipment. More detailed information is contained in "Operating Instructions<Full version>".

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license. Other trademarks and trade names are those of their respective owners.



The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®. The Wi-Fi Protected Setup™ Identifier mark is a certification mark of Wi-Fi Alliance®. "Wi-Fi" is a registered trademark of Wi-Fi Alliance®. "Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.

Google Play and Android are trademarks of Google Inc.

App Store is a service mark of Apple Inc.

All other trademarks are trademarks of their respective owners.

This product incorporates the following software:

- (1) the software developed independently by or for Panasonic Corporation,
- (2) the software owned by third party and licensed to Panasonic Corporation,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

Please refer to the detailed terms and conditions thereof shown in our website below.

http://panasonic.jp/support/global/cs/audio/oss/all8_3_1c.html

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

Contact Information: oss-cd-request@gg.jp.panasonic.com

The source code and the copyright notice are also available for free in our website below.

<http://panasonic.net/avc/oss/>

CE1177

Declaration of Conformity (DoC)

Hereby, "Panasonic Corporation" declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Customers can download a copy of the original DoC to our R&TTE products from our DoC server:

<http://www.doc.panasonic.de>

Contact to Authorised Representative:

Panasonic Marketing Europe GmbH, Panasonic Testing Centre, Winsberg 15, 22525 Hamburg, Germany

This product is intended to be used in the following countries. GB, DE, AT, BE, DK, SE, FR, IT, ES, NL, FI, GR, PT, PL, HU, CZ, SK, EE, LV, LT, SI, BG, RO, MT, CY, IE, LU, HR, NO, CH, IS, LI, TR

This product is intended for general consumer. (Category 3) The WLAN feature of this product shall exclusively be used inside buildings.

This product on purpose to connect to access point of 2.4 GHz or 5 GHz WLAN.

Product Identification Marking is located on the bottom of the unit.

Model number suffix "EB" denotes UK model.

Manufactured by:

Panasonic Corporation
Kadoma, Osaka, Japan

Importer for Europe:

Panasonic Marketing Europe GmbH
Panasonic Testing Centre
Winsberg 15, 22525 Hamburg,
Germany

Panasonic Corporation



Web Site: <http://www.panasonic.com>