

KX-TGMA45/44 compatible function list

✓	Function is supported
-	Function is not supported

	Function of handset	details	Base unit : KX-TGM4xx	Base unit: KX-TGF5xx	Base unit: KX-TGD5xx	Base unit: KX-TGL4xx	Base unit: KX-TGE4xx	Base unit: KX-TGF3xx	Remark
10	Baby monitor	This feature allows you to listen in on a room where another handset is located.	-	-	-	-	-	-	
11	Auto Intercom	This feature allows the handset to answer intercom calls automatically when it is called	-	-	-	-	-	-	
12	Redial	You can dial from redial list you recently dialed.	✓ Last 5 numbers	✓ Last 5 numbers	✓ Last 5 numbers	✓ Last 5 numbers	✓ Last 5 numbers	✓ Last 5 numbers	
13	Message Indicator	The message indicator on the handset can indicate unit status.	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	✓ Incoming call ON/OFF New message ON/OFF New Voicemail ON/OFF Missed call ON/OFF Alarm ON/OFF Apprication alert ON/OFF (Link to cell model only)	How to set the Message indicator, please refer next page
14	Memory dial	you can assign a phone number to each dial key (1 to 9) on the handset.	✓ shared with all hansed	✓ individual	✓ individual	✓ individual	✓ individual	✓ individual	
15	Slow talk	This feature slows down the speed of the other party's voice, which can make it easier to understand phone conversations, answering system messages, etc.	✓	-	-	-	-	-	
16	Talking keypad Talking Phonebook	This feature helps you by announcing phone numbers entered for dialing, phonebook, and memory dial.	✓	-	-	-	-	-	
17	Spanish phonebook	You can register the party's name in Spanish to phonebook.	✓	✓	✓	✓	✓	-	
18	Talking Caller ID	This feature lets you know who is calling without looking at the display.	✓ English / Spanish	✓ English / Spanish	✓ English / Spanish	✓ English / Spanish	✓ English / Spanish	✓ English	
19	Voice paging	If you select "Voice paging" when making an intercom call, your voice will be heard from the speakers of the base unit and all handsets.	✓	✓	-	✓	✓	-	

Message indicator

The message indicator on the handset can indicate unit status, as explained below.

Indicator	Status
Flashing rapidly	<ul style="list-style-type: none">– Outside call or intercom call is being received or on hold.– The handset alarm is sounding.
Flashing slowly	<ul style="list-style-type: none">– There are new messages.– There are new voicemails.– There are missed calls.

Setting the message indicator

You can enable and disable the message indicator for each type of status.

- “Incoming call” (default: On)
- “New message” (default: On)
- “New VM” (default: On)
- “Missed call” (default: Off)
- “Alarm” (default: On) (handset only)

This feature can be set for each unit.

1 For handset: [MENU]#278

- 2** [↕]: Select the desired setting and press [SELECT].
- “✓” is displayed next to enabled items.
 - To disable an item, select it and press [SELECT] again. “✓” disappears.

3 [SAVE] → [OFF]

Note:

- If the message indicator flashes when the handset is not placed on the base unit, the handset consumes battery power faster than usual.