


QUICK START GUIDE

AirPlay function allows you to stream music wirelessly from an iOS device, such as iPhone or iPod touch to the speakers of SC-HC57. To use the AirPlay function, SC-HC57 must join the same wireless network as the iOS device through the wireless network router (access point).

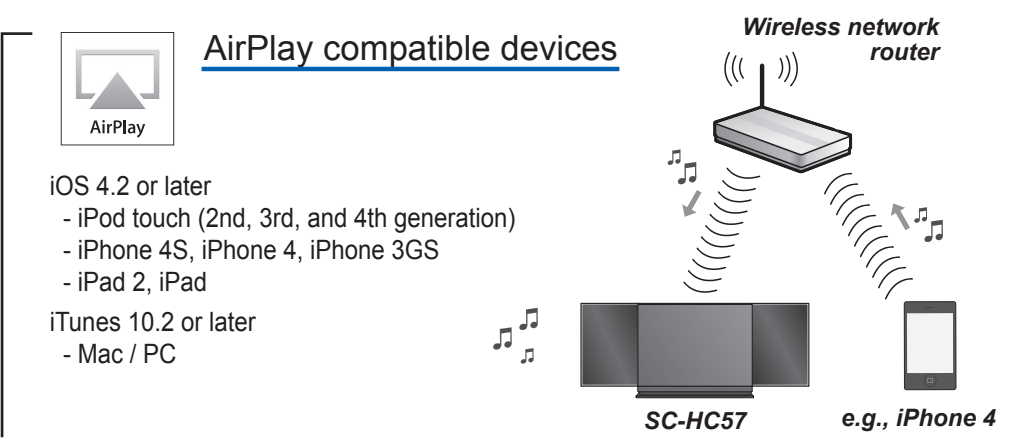

Setting up SC-HC57

Set up SC-HC57 by following the method that suits you best.

Is your wireless network router WPS compatible?

Yes

- Supports WPS*1
(Push Button Configuration)

*1 : WPS : Wi-Fi Protected Setup™

I don't know

- Doesn't support WPS
- METHOD 1 didn't work*2

*2 : Turn SC-HC57 off before proceeding to METHOD 2.

METHOD 1

1 Turn on SC-HC57 and then activate the WPS push button setup mode.

Lights red

Press and hold until "CONNECT" starts flashing.

Blinks blue

2 Press the WPS button on the wireless network router to establish the connection.

Router's manual

Wireless network router

LINKING
2 min. (Max)

SUCCESS

Press OK on the remote control to complete the setting.

*3 : The marking may differ.

METHOD 2

The following explanations are based on an iPhone.

Connect your iOS device to SC-HC57

1 Turn on SC-HC57 and then activate the network setup mode.

Lights red

Press repeatedly to select "NET SETUP".

SETTING

2 Connect your iOS device to SC-HC57's setup network.

Settings

Wi-Fi

Turn on

Setup

Enter your home wireless network details

1 Display SC-HC57's network setting page.

Safari

Address bar : Type in "192.168.1.12"

Go

Search wireless network

2 Select your home wireless network (SSID).

Search wireless network

Network name (SSID)

Your home wireless network name (SSID)

Done

3 Enter your home wireless network password.

Search wireless network

Password

Type in the password

Done

Search wireless network

Network name (SSID)

Next

Preparation

Before proceeding, check your home wireless network name (SSID) and password.

SSID: XXXXXXXXXX

Password: XXXXXXXXXX

Router

Router's manual

Complete the settings

1 Apply your home wireless network details to establish the connection.

JOIN

OK

The settings have been applied.

Confirm the indications on the device.

LINKING
2 min. (Max)

SUCCESS

Press OK on the remote control to complete the setting.

Using AirPlay

The following explanations are based on an iPhone.

Preparation

- Make sure SC-HC57 is turned on.

1 Connect your iOS device to your home wireless network.

Settings

Wi-Fi

Turn on

Your home wireless network name (SSID)*4

2 Select "Panasonic HC57" from the AirPlay icon and start play.

Music

Panasonic HC57

Play starts.
(with a slight delay)

If the AirPlay icon is not displayed, try:

- Restarting the wireless network router.
- Restarting the iOS device (iPhone/iPod touch/iPad).
- On the iOS device, turn the Wi-Fi® setting off and on again.

FAQ

I have a new iOS device (iPhone/iPod touch/iPad), do I need to reset SC-HC57?
No, you only have to connect the new iOS device to the same home wireless network. (Refer to "Using AirPlay")

My wireless network router is WPS push button compatible but SC-HC57 does not light blue with "METHOD 1".
The security setting may be set to WEP. Try using "METHOD 2".

Can I change the display name for SC-HC57 (e.g., HC57_Bedroom)?
Yes, refer to the Owner's Manual "Network settings", under "AirPlay".

AirPlay, the AirPlay logo, iPad, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. The Wi-Fi Protected Setup Mark is a mark of the Wi-Fi Alliance. "Wi-Fi" and "Wi-Fi Protected Setup" are marks or registered marks of the Wi-Fi Alliance.
All other trademarks are trademarks of their respective owners.
Screen images used in this sheet : iPhone 4, iOS 5.0.1

If you have any questions, contact:

U.S.A. and Puerto Rico: 1-800-211-PANA (7262)

Mon-Fri: 9 am - 9 pm (EST) Lunes-Viernes
Sat-Sun: 10 am - 7 pm (EST) Sabado-Domingo
http://www.panasonic.com/help

Canada:

Telephone: 1-800-561-5505
E-mail link: "Support" → contact us → email" on www.panasonic.ca

RQCA2062-1