

Dear Customer

◆ About the Upgrade of the Firmware

Model No. DMC-GX8/DMC-G7/DMC-G70/DMC-FZ300/DMC-FZ330

The following functions were added or changed from Ver. 2.2 of the firmware.

Please read this in conjunction with the operating instructions for the camera.

- The firmware version can be checked from the [Version Disp.] of the [Setup] menu.

Functions that can be assigned to the function buttons have been added.

You can now select the following items in [Fn Button Set] in the [Custom] menu.

[Setting in REC mode]	[Wireless Setup(Flash)]
[Setting in PLAY mode]	[Wi-Fi], [LVF/Monitor Switch]