

Notice

Firmware Updates

The following functions have been added in firmware version 1.1.

Refer to the operating instructions for the unit and the digital camera together with this document.

- The firmware version can be verified in [Version Disp.] of the digital camera's Setup menu.

Time code output from the HDMI terminal

When [HDMI Time Code Output] is set to [ON] on the digital camera, a time code will also be output from the unit's HDMI terminal.

MENU →  [Motion Picture] → [Time Code] → [HDMI Time Code Output]

Recording control for external devices

When [HDMI Recording Control] is set to [ON] on the digital camera, recording start/stop commands will be output to the external device connected to the unit's HDMI terminal. Only devices compatible with the unit can be controlled.

MENU →  [Motion Picture] → [HDMI Rec Output] → [HDMI Recording Control]

1080/30PsF (1080/25PsF) SDI signal output

When [1080/30p(25p) Set.] is set to [30p(25p)] on the digital camera, 1080/30PsF (1080/25PsF) SDI signals will be output from the unit's SDI OUT terminal. In addition, 1080/30p (1080/25p) signals will be output from the HDMI terminal.

- When [60p(50p)] is selected, 1080/60p (1080/50p) signals will be output from both the SDI OUT terminal and the HDMI terminal.

MENU →  [Motion Picture] → [HDMI Rec Output] → [1080/30p(25p) Set.]

Firmware updates for digital camera

Update the firmware of supported digital camera (DMC-GH4) before using them with the unit.

- If the firmware is not updated, some functions may not operate properly.

Supported firmware versions	Digital camera	Unit
		2.1 or later

For detail on the update procedure for digital camera, visit the following websites.

<http://panasonic.jp/support/global/cs/dsc/>