


## Dear Customer

### ◆ About the Upgrade of the DMC-GH3 Firmware

The following functions were added or changed from Ver. 1.2 of the firmware.  
Please read this in conjunction with the owner's manual for the camera.


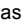


- The firmware version can be checked from the [Version Disp.] of the [Setup] menu.

### The Low Light AF Function has been added.

It becomes easier to set focus in a dark environment. When the Low Light AF Function is activated, the focus indication is displayed as .

- Focusing may take longer than usual.

### [Silent Mode] has been added to [Custom] menu.

|               |  |
|---------------|--|
| [Silent Mode] | <p>Allows you to disable operational sounds and output of light at once.</p> <p><b>[ON]:</b><br/>Operational sounds are muted, and the flash and the AF Assist lamp are forced off. The following settings are fixed.  is displayed.</p> <ul style="list-style-type: none"> <li>– [Electronic Shutter]: [ON]</li> <li>– [Flash Mode]:  ((Forced Flash Off))</li> <li>– [AF Assist Lamp]: [OFF]</li> <li>– [Beep Volume]:  (OFF)</li> <li>– [E-Shutter Vol]:  (OFF)</li> <li>– [Speaker Volume]: 0</li> </ul> <p><b>[OFF]</b></p> |
|---------------|--|

- Even when [ON] is set, the following functions light up/flash.
  - Status indicator
  - Self-timer indicator
  - Wi-Fi connection lamp
- [Silent Mode] can be assigned to a function button.

### [Exposure Comp. Reset] has been added to [Setup] menu.

|                        |   |
|------------------------|---|
| [Exposure Comp. Reset] | <p>Reset the Exposure Compensation value when the Recording Mode is changed or the camera is turned off.</p> <p><b>[ON]/[OFF]</b></p> |
|------------------------|---|