

Dear Customer

About the **BERLIN PHILHARMONIC HALL MODE**

Reproduce sound field of the concert hall “Philharmonie”, which is home to the Berlin Philharmonic.

- This works only when the input selected is “TV”, “HDMI 1”, or “HDMI 2”.

- 1 Press **[SOUND]** repeatedly to select “**BERLIN PHILHARMONIC HALL MODE**” and then press **[OK]**.
- 2 Press **[▼]** **[▲]** to select “**ON**” and then press **[OK]**.



- This has an effect only on PCM sound sources.

About the “Panasonic Music Control” app

You can stream music files from the device on your network to this unit by using the free app “Panasonic Music Control”.

Preparation

- Complete the network settings. (⇒ 16, Operating Instructions)
- Connect the following devices to the same network as this unit.
 - Device on which to install the “Panasonic Music Control” app
 - Device containing music source

1 Download the free app “Panasonic Music Control” on your smartphone/tablet.



• **Android** : Google Play™

• **iOS** : App Store



2 Start the app “Panasonic Music Control”.

- Always use the latest version of the app.

3 Select this unit as the output speaker.

4 Select a music source.

5 Select a music file.



- To use Windows Media® Player
 - Add the contents and folder to the libraries of the Windows Media® Player 11 or 12, or a smartphone, etc.
 - Playlist of Windows Media® Player can play back only the contents that are stored in the libraries.
 - To use Windows Media® Player for streaming, you need to configure it in advance.
- Depending on the contents and the connected equipment, playback may not be performed properly.
- Also refer to the “Operating Instructions”.

The operations and on-screen display items, etc. of the app “Panasonic Music Control” are subject to change. For the latest information, visit

<http://panasonic.jp/support/global/cs/audio/app/>

(This site is in English only.)