 


Adjusting the turntable startup/brake speed

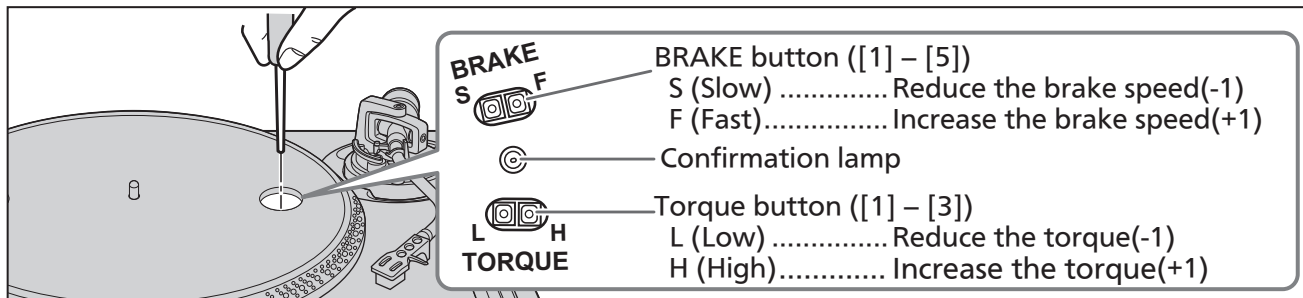

 
● Press the centre of the button lightly.

Startup speed


You can select from three time options for the turntable to reach constant speed after [START-STOP] is pressed.

Press the H button to increase the torque (the power required to rotate) and shorten the time to stabilise rotation. (The factory setting is [3]: highest.)

① The confirmation lamp blinks the specified number of times according to the current setting when you press the H or L torque button.

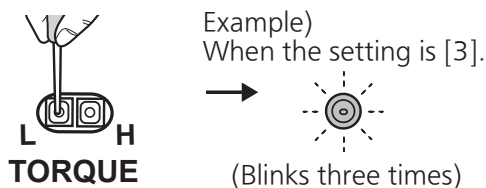


 ② To change the setting, press the H or L torque button while the lamp is lit for two seconds.

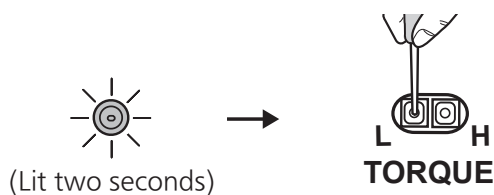

③ After you press the torque button, the confirmation lamp blinks the specified number of times showing the new setting, stays lit for two seconds and then goes off.

 Example) When the setting is [1].

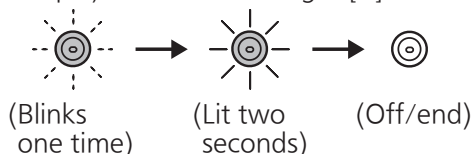


Brake speed

You can select from five time options for the turntable to stop after [START-STOP] is pressed.


(You can change the brake power.)

(The factory setting is [5]: fastest.)

 ① The confirmation lamp blinks the specified number of times according to the current setting when you press the F or S brake button.

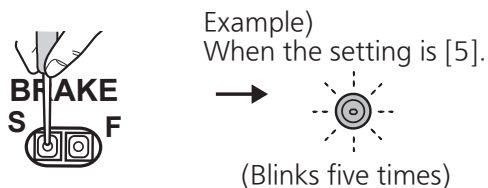

 ② To change the setting, press the F or S brake button while the lamp is lit for two seconds.

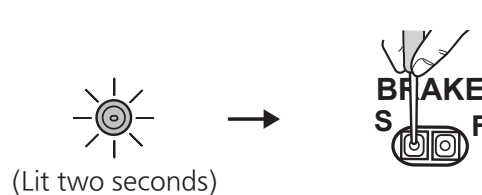

③ After you press the brake button, the confirmation lamp blinks the specified number of times showing the new setting, stays lit for two seconds and then goes off.

Example) When the setting is [3].

